



ClassCast

Three channels allow multiple sets to be used at the same time

Use up to 18 headsets with one transmitter



USER GUIDE

www.tts-shopping.com



Important information

Please read all instructions fully before using.

The ClassCast is supplied with a 650mAH Lithium Polymer battery. The transmitter is supplied with a 1000mAH Lithium polymer battery pack. The battery packs are not user replaceable.

To clean, wipe the ClassCast with a clean damp cloth.

Do not allow ClassCast to come into contact water or other liquids.

Keep the ClassCast away from direct sunlight and heat when not in use..

Please retain the information in this User Guide for future reference.

In the event of an electrostatic discharge, your ClassCast may malfunction. In this case, please switch it off and then back on again to reset it.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are only to be charged by an adult.


Batteries are to be inserted with the correct polarity.

The supply terminals are not to be short-circuited.

Only batteries of equal size and type should be used.

ClassCast

Know your ClassCast

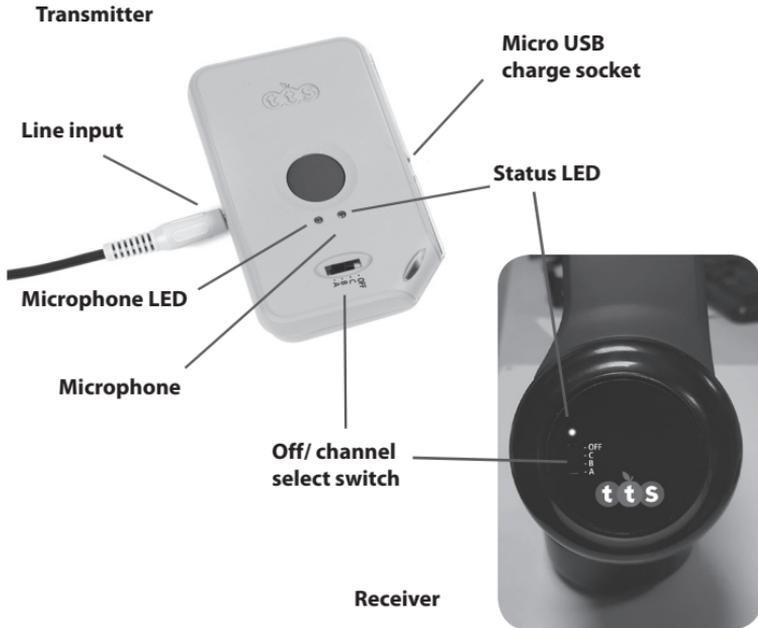

Charging the head phones and transmitter

Plug in the external power supply and connect the DC jack to the splitter cable. Connect all the headsets and the transmitter to the splitter cable. A red LED will light to show that the devices are charging and will change to green once charging is complete. Charging could take up to 8 hours depending on the state of the battery. The devices will charge whether they are switched on or off, but please note that they cannot be used whilst charging. To get the best performance from the rechargeable batteries it is better to keep the devices topped up regularly rather than fully discharge. Always charge all the devices prior to long term storage.



Using the ClassCast

Channel selector

ClassCast can work on one of three channels, A,B or C. This means that you can have up to three sets of ClassCast working at the same time. Up to 18 headsets can be used with a single transmitter, just select the same channel setting on the headphones and transmitter. To switch on, just move the slide switch from the "off" position to the desired channel. Make sure you have selected the same channel on the transmitter.

External audio source

You can connect any device with a 3.5mm headphone socket (Phone, iPod, CD player etc) to your ClassCast using the audio lead supplied. Set the volume on your device and the ClassCast transmitter will stream the audio to the headphones. There is also a volume control on each headset so that each user can control the loudness.

Microphone

The ClassCast transmitter also has a microphone so that a teacher can communicate easily with the children when they are wearing the headsets. To talk to the children just press the microphone button. The blue LED will light to show that the microphone is active and the transmitter will disconnect the external sound source. When you have finished speaking, just release the microphone button and ClassCast will begin streaming the external audio once more.

Transmitter Status LEDs

Specifications	
Frequency	2.4GHz
Range	Up to 30m line of sight
Battery life	Approx 8 hours

ClassCast

The blue LED is the Mic on indicator. When the microphone button is pressed the Blue LED will light to show that the microphone is active

Transmitter Status LED

Flashing Green	Power on
Green	Paired
Flashing Red	Low battery warning

Headphone Status LEDs

Flashing green	Power on
Green	Paired
Flashing Red	low battery Warning

Charging

When charging the transmitter and headphone status LED will indicate the charge state:

Red LED on	Charging
Green Led on	Fully charged

Problem	Solution
Cannot hear any audio	Ensure that the transmitter is switched to the same channel as the headset. Ensure the status LED is green. Check the headset volume control setting.
Audio is distorted	Audio source volume is too high. Reduce the volume until there is no distortion.
Audio drops out	Out of range. Move closer to the transmitter. Battery voltage is too low. Recharge the battery

Warranty & Support

This product is provided with a one year warranty for problems found during normal usage. Mistreating the ClassCast or opening the unit will invalidate this warranty. Any data stored on the unit and any consequential loss is not covered by this warranty. The battery is not user replaceable.

Technical Support

Please visit www.tts-group.co.uk for the latest product information.
Email feedback@tts-group.co.uk for technical support.


TTS Group Ltd.
Park Lane Business Park
Kirkby-in-Ashfield
Nottinghamshire,
NG17 9GU, UK.
Freephone: 0800 318686 Freefax: 0800 137525

WARNING: Do not dispose of this product in household waste. Hand it over to a collection point for recycling electronic appliances.

Not suitable for children under 36 months due to small parts – choking hazard. Made in China, on behalf of the TTS Group Ltd.

TTS Product Code:

EL00499

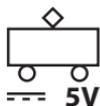

TTS is proud to be part of **RM** plc