

Rainbow Recordable Pegs



- Please retain these instructions for future reference
- Your Rainbow Recordable Pegs each contain three AG13 batteries
- Batteries should only be changed by adults
- Remove exhausted batteries from your Rainbow Recordable Pegs
- Only batteries of the same or equivalent type as AG13 should be used
- Batteries are to be inserted with correct polarity
- Do not allow your Rainbow Recordable Pegs to come into contact with water or other liquids

Operation Guide

1. Move the slide switch on the side to REC
2. Touch the two contacts near the end of the peg. The Peg will beep once, the Red LED will light and the user can start speaking into the microphone near the centre of the unit
3. Touch the two contacts again when the recording is complete. The Peg will beep twice to indicate end of recording
4. Move the slide switch on the side to PLAY
5. Touch the two contacts briefly and the unit will play back the recorded sound
6. Move the slide switch to OFF when not in use, to preserve the battery life



WARNING:

CHOKING HAZARD – Small parts.
Not for Children under 3 years.



www.tts-shopping.com