



# Easi-Speak® 2

An MP3 microphone designed to be used in Primary schools



**User Guide**  
[www.tts-group.co.uk](http://www.tts-group.co.uk)

1


## Important Information

- Please retain the information in this User Guide for future reference.
- Please read all instructions fully before using.
- To clean, wipe the surface with a clean damp cloth.
- Do not allow the product to come into contact with water or any other liquids.
- Keep the product away from direct sunlight and heat.
- If your product malfunctions please switch it off and then back on again to reset it.

## Pack Contents

- Easi-Speak 2
- User Guide
- 1 x USB (type A female to type A male) charging cable
- Lanyard with quick release

## Know Your Product

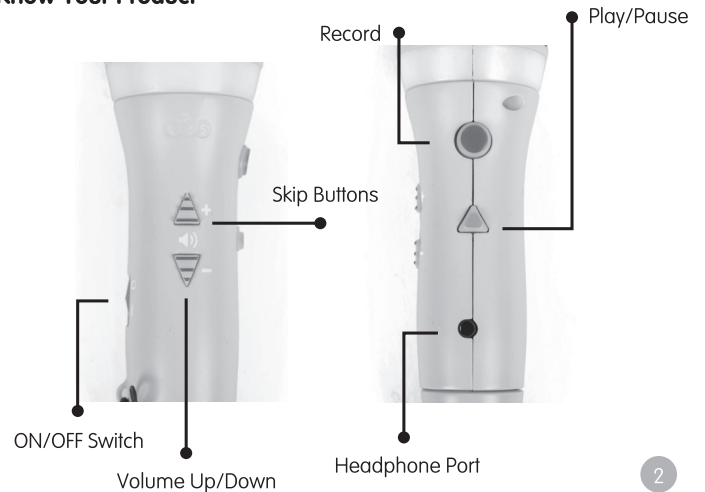

2

# Easi-Speak® 2



## Using Your Product

To turn the Easi-Speak 2 on, move the slide switch to the ON position. The LED's will light amber to indicate the device is on.

## Recording

To make a recording press and release the red record button, a single beep will be heard and the LED's will light solid red to indicate recording has started. To stop recording press and release the record button, a double beep will be heard and the LED's will change to solid green to indicate recording has stopped.

## Playback

To playback a recording press and release the green play button. The LED's will light solid green and playback will begin. To pause playback, press and release the green play button, the LED's will turn green. To stop playback, press the green play button (1-2 seconds) and release. The LED's will change to solid amber and playback will stop. When audio is played back, it can be heard through the internal speaker or headphones.

## Track Skip

To skip forward to the next track, long press play for 3 seconds until a single beep is heard, the LED's will rapidly flash green. Short press play to play the previous track.

## Volume Controls

To increase or decrease the volume, use the volume control buttons. This will change the volume of audio played back through the internal speaker, headphones or Bluetooth.

3

## Deleting files

To delete a single recording, pause the track as it is playing, then long press the record button (5 seconds) until the LED's flash red, then release the button. When the track has been deleted the LED's will change to solid green.

To delete all tracks, ensure the device is playing, then long press the record button (5 seconds) until the LED's flash red, then release the button. When the track has been deleted the LED's will change to solid green.

Files can also be deleted when Easi-Speak BT is connected to a PC using USB.

## To connect to a PC

Ensure the microphone is switched off. Remove the base cap from the microphone and insert the microphone USB connector into a USB port on the PC. The LED's will flash multiple colours.

Once connected to the PC, the microphone will appear as a USB drive. The MIC\_REC folder is where the microphone stores recordings. Files can be copied to or from the device.

**NB: Whilst connected to a PC, the microphone battery will charge.**

## Using Micro SD cards

The microphone has 128mb internal storage. Micro SD cards can be used to increase the storage capacity if required. The micro USB socket is located just above the USB connector.

4

## Button function

Start recording / stop recording	Single press record to start. Single press record to stop.
Start playback / pause / stop playback	Single press play to start, single press to pause, long press to stop
Increase / decrease volume	Volume up and down buttons
Delete a single recording	Long press record button while paused on track to be deleted
Delete all recordings	Long press record button whilst playing

## Audible indication

Record start	Single beep
Record stop	Double beep

5

## LED indicator

Device on	Amber steady
Recording	Solid Red
Playing back	Solid Green
Paused	Amber Flashing
Delete a single recording	Flashing red
Delete all recordings	Flashing red

6

## Battery Precautions

- Easi-Speak 2 is powered by a lithium battery which is not user replaceable. DO NOT attempt to remove the battery packs.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not short circuited.
- Only batteries of equal size and type should be used.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.

## Recharging the product

- When the microphone has 10% battery life remaining the LED's will flash red to indicate charging is required.
- Ensure the microphone is switched off.
- Remove the base cap from the microphone.
- Insert the microphone USB connector into a USB docking station or a suitable USB charger.
- Whilst charging, the LED's will flash red every few seconds.
- When charge is complete the LED's will change to solid green.
- The product may take up to 2-3 hours to fully charge, this is if the battery has been fully discharged.
- Once fully charged the product will have life for approximately 2-3 hours in continuous use.

**NB: The microphone will also charge whilst it is connected to a PC.**

7

## Technical Support

Please visit [www.tts-group.co.uk](http://www.tts-group.co.uk) for the latest product information.  
Email [feedback@tts-group.co.uk](mailto:feedback@tts-group.co.uk) for technical support.

TTS Group Ltd.  
Park Lane Business Park  
Kirkby-in-Ashfield  
Nottinghamshire  
NG17 9GU, UK.  
Freephone: 0800 318686 Freefax: 0800 137525

**WARNING:** Do not dispose of this product in household waste.

**WARNING:** Hand it over to a collection point for recycling electronic appliances.

**WARNING:** Not suitable for children under 36 months due to small parts- choking hazard.

Made in China, on behalf of TTS Group Ltd.

TTS Product Code:

**IT10100**



8