

ASSEMBLY INSTRUCTIONS – FU10045

CROOKED HOUSE

PLEASE NOTE THAT ASSEMBLY WILL NEED AT LEAST TWO ADULTS.

1. CHECK ALL PARTS ARE PRESENT.
2. PLACE FLOOR SECTION IN POSITION ON FLAT LEVEL GROUND. (See Fig 1)



Fig 1

3. OFFER UP BACK AND RIGHT PANEL TO THE FLOOR SECTION AND FIX BOTH PANELS TOGETHER, USING 5 X 80MM SCREWS THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 2, 3 & 4)



Fig 2



Fig 3



Fig 4



ASSEMBLY INSTRUCTIONS – FU10045

CROOKED HOUSE

4. OFFER UP THE LEFT PANEL TO THE BACK PANEL, AND FIX BOTH PANELS TOGETHER USING 5 X 80MM SCREWS THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 5, 6 & 7)



Fig 5



Fig 6



Fig 7

5. PLACE THE FRONT PANEL INTO POSITION AGAINST BOTH SIDE PANELS AND FIX TO EACH SIDE USING 10 X 80MM SCREWS (5 EACH SIDE), THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 8, 9 & 10)



Fig 8



Fig 9



Fig 10



ASSEMBLY INSTRUCTIONS – FU10045

CROOKED HOUSE

6. ENSURE ALL PANELS ARE SET ON THE FLOOR WITH NO GAPS AND FIX EACH PANEL INTO FLOOR USING 19 X 80MM SCREWS THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 11 &)



Fig 11



Fig 12

7. PLACE THE ROOF INTO POSITION – RIGHT SIDE FIRST THEN LOWER THE LEFT SIDE UNTIL IT SITS ON THE PANEL. ENSURE THE ROOF IS SAT ON ALL FOUR SIDES WITH NO GAPS. FIX THROUGH FRONT AND BACK USING 10 X 60MM SCREWS (5 EACH SIDE), THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 14, 14 & 15)



Fig 13

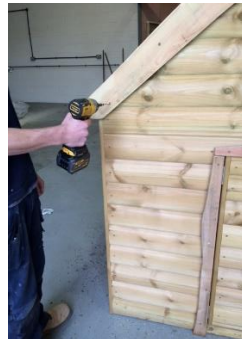


Fig 14



Fig 15



ASSEMBLY INSTRUCTIONS – FU10045
CROOKED HOUSE

Completed Product.



Parts List:

- 49 X 80MM FIXING SCREWS

Tools Required

- DRILL OR SCREWDRIVER.



ASSEMBLY INSTRUCTIONS – FU10045
CROOKED HOUSE

