



Motion Sensing Reminder

Ensure students are reminded of
school etiquette at all times



User Guide

www.tts-group.co.uk




Important Information

- Please retain the information in this User Guide for future reference.
- Please read all instructions fully before using.
- To clean, wipe the surface with a clean damp cloth.
- Do not allow the product to come into contact with water or any other liquids.
- Keep the product away from direct sunlight and heat.
- If your product malfunctions please switch it off and then back on again to reset it.

Pack Contents

- Motion Sensing Reminder.
- User Guide.

Know Your Product

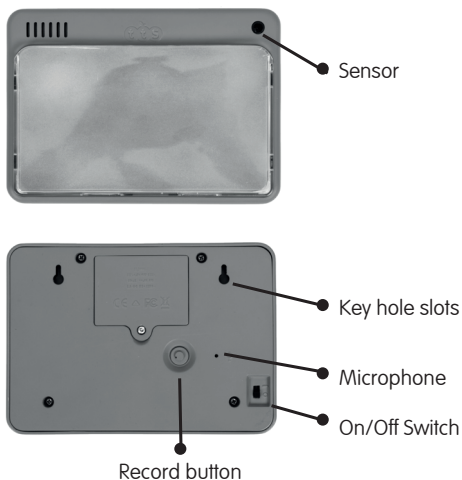

Motion Sensing Reminder

Using Your Product

- There are 30 seconds of record time available for this product.
- To make a recording press the record button on the back of the unit. A single beep will signal the start of recording, when finished press the record button again and a double beep will signal the end of recording.
- To activate the sensor and play back the recording there must be movement within a 1 metre range in front of the sensor. Once activated the message will play back and the front of the unit will light up.
- Switch the product off when not in use to conserve the batteries.
- Each unit has a plastic window that can be used for inserting paper or card with messages or images on.

Battery Precautions

- 3 X AAA batteries are required for this product (not included).
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Only batteries of equal size and type should be used.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.

Replacing Batteries

- Remove the battery hatch cover and carefully remove the batteries and dispose of them responsibly.
- Insert new batteries, ensuring the correct polarity. Replace the battery hatch firmly and accordingly.
- Different types of batteries for new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the product.



Trouble Shooting

Problem	Solution
Product will not light up or play back	Ensure that the slide switch is set to 'ON' Ensure you are within a 1 metre range of the product
Audio is quiet or distorted	Ensure you have recorded your message clearly by speaking into the microphone on the back.

Technical Support

Please visit www.tts-group.co.uk for the latest product information.

Email feedback@tts-group.co.uk for technical support.

TTS Group Ltd.
Park Lane Business Park
Kirkby-in-Ashfield
Nottinghamshire
NG17 9GU, UK.
Freephone: 0800 318686 Freefax: 0800 137525

WARNING: Do not dispose of this product in household waste.

WARNING: Hand it over to a collection point for recycling electronic appliances.

Made in China, on behalf of TTS Group Ltd.

TTS Product Code:

IT10087



TTS is proud to be part of **RM** plc