



# Replacement Bee-Bot/ Blue-Bot Battery



Getting Started Guide

[www.tts-shopping.com](http://www.tts-shopping.com)

# Replacement Bee-Bot/ Blue-Bot Battery



## 5 Simple steps to replace your Bee-Bot Battery

1. With a small flat head screw driver, unscrew the battery plate.



2. Take out the faulty battery.



3. Unplug the wire.



4. Plug in the replacement battery.



5. Screw the back plate back in place.



On completing these steps, try turning your robot on and start programming!

For more information please see the video online at: <https://www.tts-group.co.uk/bee-botblue-bot-replacement-battery/1015414.html>