PLAY & STORE CENTRE – Assembly Instructions Page 1 of 4

CHECK ALL PARTS ARE PRESENT AND UNDAMAGED. **PLEASE NOTE THAT SOME PARTS OF THIS ARE HEAVY AND WILL REQUIRE AT LEAST TWO PEOPLE TO LIFT.** SELECT SUITABLE POSITION. AREA SHOULD BE LEVEL AND FLAT.

STAND UP PRE-BUILT END SECTION. .



FIX BACK PANEL TO END SECTION USING 4 Nr 80mm SCREWS INTO PRE-DRILLED HOLES.



View of end section and back panel.

FIX END PANEL TO BACK USING 4 Nr 80mm SCREWS INTO PRE-DRILLED HOLES.



View of pre-built end section with back and end panels attached.

FIX FRONT PANEL TO END PANEL USING 2 Nr 80mm SCREWS INTO PRE-DRILLED HOLES.



View of end section with back, end and front panels fitted.

MAKE SURE ALL PANELS ARE LINED UP AND CORNERS ARE SQUARE

## FIT ROOF (LOWER THE BACK EDGE DOWN FIRST). NOTE THAT THE FRONT IS LABELED, AS THE ROOF WILL ONLY FIT ONE WAY.

FIX ROOF WITH 7 X 80 mm SCREWS (ONE INTO EACH POST) THROUGH PRE DRILLED HOLES



View of finished unit.

PARTS LIST. PRE-BUILT END UNIT. BACK PANEL. END PANEL. FRONT PANEL. ROOF RAIL. ROOF.

13 x 80 MM SCREWS.