
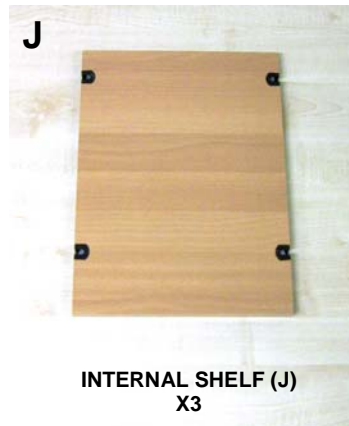
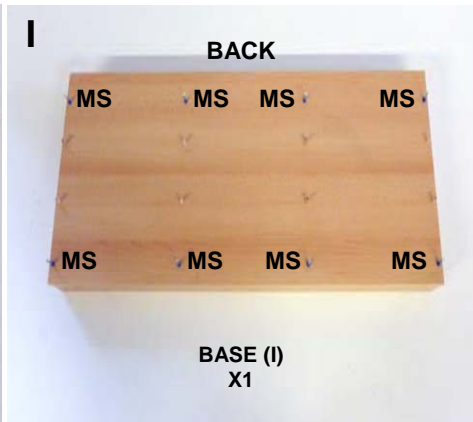


## COMPONENTS

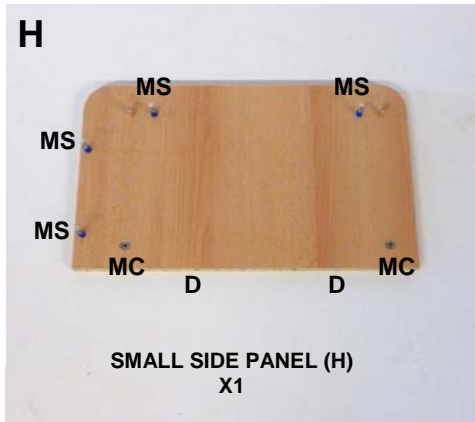

Should you encounter any difficulties, or require assistance, please contact:

Kebrico Limited  
Walker House  
Skippers Lane  
Skippers Lane Industrial Estate  
Middlesbrough  
TS6 6HA  
Telephone: (01642) 460555  
[www.kebrico.co.uk](http://www.kebrico.co.uk)  
[customerservices@kebrico.ltd.uk](mailto:customerservices@kebrico.ltd.uk)

PLEASE RETAIN OUR ADDRESS FOR FUTURE REFERENCE

KK/SS/MAY15



**SSS (SAFE STURDY STORAGE)**

**630049**

**(138149.2 & 138167.2)**

**TIERED SSS ACCESS (RH)  
CONTENTS, COMPONENTS AND  
PRE-ASSEMBLY INSTRUCTIONS**





## STEP 1

**Please fit the Minifix studs (MS), Minifix cams (MC), Horseshoe studs (HS) and Dowels (D) in the relevant holes as shown in the pictures before assembly.**

## CONTENTS



## COMPONENTS

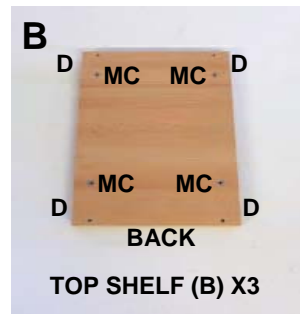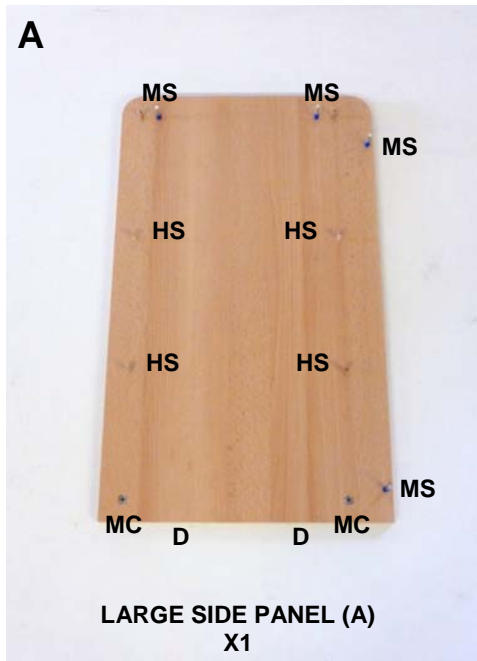

When fitting the Minifix cams (MC) please ensure the arrows on the Minifix cams (MC) are pointing to the outer edge holes.

Please insert the dowels (D) into the outer edge holes.

## COMPONENTS

