



**SSS (SAFE STURDY STORAGE)  
630036, 630046 & 630049  
PLINTH ASSEMBLY  
INSTRUCTIONS**



Should you encounter any difficulties, or require assistance, please contact:

Kebrico Limited  
Walker House  
Skippers Lane  
Skippers Lane Industrial Estate  
Middlesbrough  
TS6 6HA  
Telephone: (01642) 460555  
[www.kebrico.co.uk](http://www.kebrico.co.uk)  
[customerservices@kebrico.ltd.uk](mailto:customerservices@kebrico.ltd.uk)

PLEASE RETAIN OUR ADDRESS FOR FUTURE REFERENCE


KK/SS/MAY15

**Please fit the Minifix studs (MS), Minifix cams (MC),  
and Dowels (D) in the relevant holes as shown in  
the pictures before assembly.**

## CONTENTS




## COMPONENTS

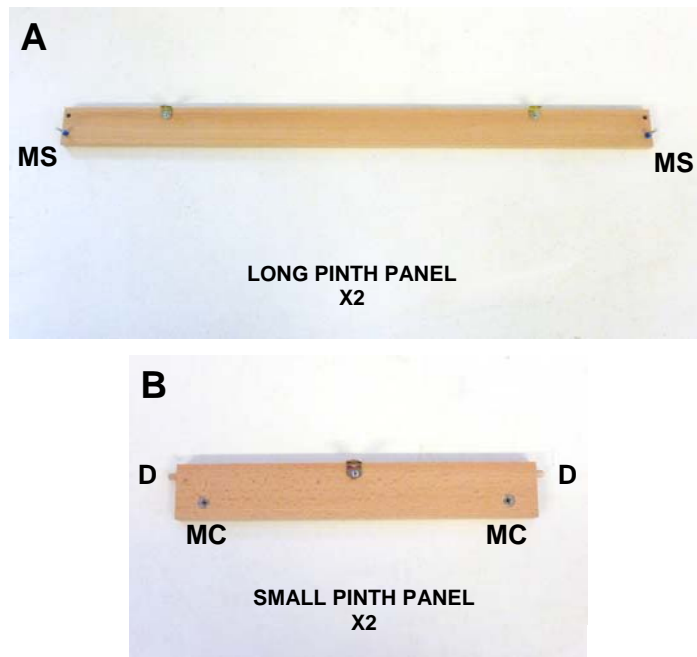

When fitting the Minifix cams (MC) please ensure the arrows on the Minifix cams (MC) are pointing to the outer edge holes.

Please be careful when tapping in the dowels.

## ASSEMBLY

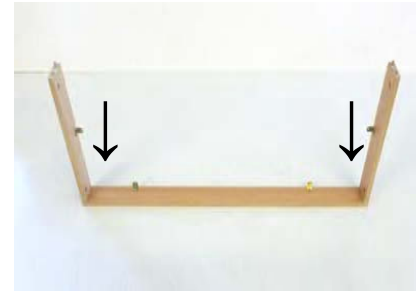

1. Align the minifix studs in a long plinth panel (A) to the outer edge holes in the 2 small plinth panels (B), press down and turn the minifix cams clockwise to lock in place.



2. Align the minifix studs in the remaining long plinth panel (A) to the outer edge holes in the 2 small plinth panels (B), press down and turn the minifix cams clockwise to lock in place.



3. Align the brackets on the assemble plinth to the pilot holes on the underside of the base panel, secure in place using 6 woodscrews.