

**139805.2  
EY06745  
SUPER SEAT  
ASSEMBLY  
INSTRUCTIONS**

Should you encounter any difficulties, or require assistance, please contact:



**TTS Group Ltd**

Unit 1, Park Lane Business Park  
Kirkby-in-Ashfield, NG17 9GU, UK  
[www.tts-group.co.uk](http://www.tts-group.co.uk)

Description Super Seat

Product code EY06745

Batch code

Country of manufacture Hungary



PLEASE RETAIN OUR ADDRESS FOR FUTURE REFERENCE




**STEP 2**


**THIS IS A TWO PERSON ASSEMBLY  
PLEASE READ BEFORE ASSEMBLY**

## ASSEMBLY


### THIS IS A 2 PERSON ASSEMBLY

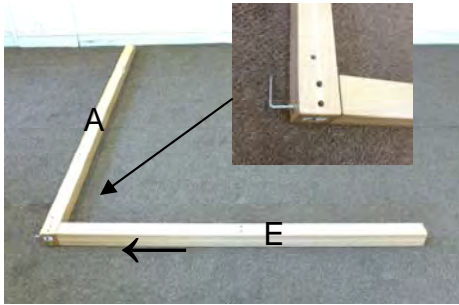


1. Align the dowel in the base post (E) to the hole in the bottom of the upright post (A), tap together and screw in a bolt.

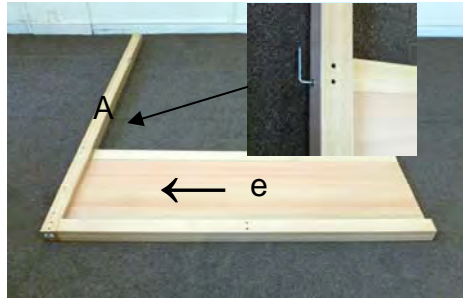


2. Align the dowels in the bottom back panel (e) to the holes on the upright post (A), tap together and screw in a bolt.

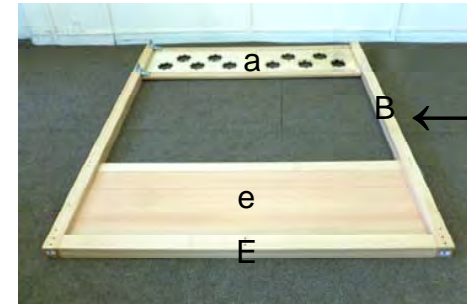

5. Align the dowels in the base post (E), bottom back panel (e) and top back panel (a) to the holes in the upright post (B), tap together and screw in 2 bolts.

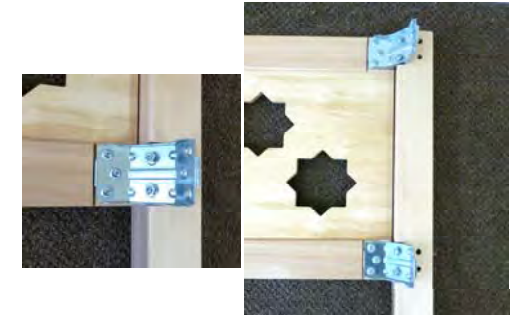


6. Place 2 brackets into the grooves in the top back panel (a) onto the bolts in the upright post (B). Screw 6 woodscrews, 4 washers and 4 nuts. (Do not tighten)

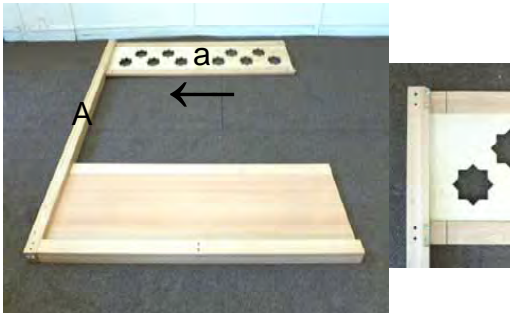


3. Align the dowels in the top back panel (a) to the holes in the upright post (A), ensuring the bracket grooves are showing and tap together.



4. Place 2 brackets into the grooves in the top back panel (a) onto the bolts in the upright post (A). Screw 6 woodscrews, 4 washers and 4 nuts. (Do not tighten)

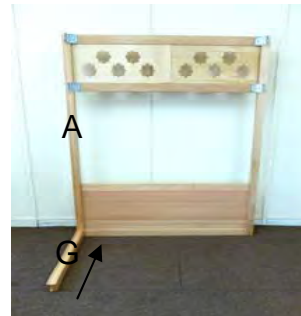

7. Carefully stand the part assembly up and rest against a wall. Align the dowel in the base post (G) to the hole on the bottom of the upright post (A), tap together and screw in a bolt.

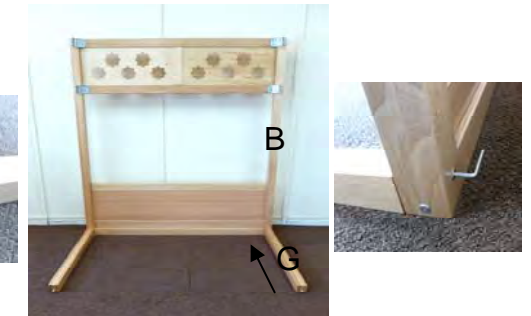

8. Align the dowel in the base post (G) to the hole in the bottom of the upright post (B), tap together and screw in a bolt.