

ASSEMBLY INSTRUCTIONS – EY10809

Sail Shade Shelter

PLEASE NOTE THAT ASSEMBLY WILL NEED AT LEAST TWO ADULTS.

1. CHECK ALL PARTS ARE PRESENT.
2. SELECT SUITABLE LEVEL POSITION.
3. PLACE 1 X DOOR PANEL NEXT TO 1 X SIDE PANEL, FIX TOGETHER USING 4 X 80MM SCREWS THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 1, 2 & 3).
4. PLACE SECOND SIDE PANEL ON OPPOSITE SIDE AND FIX TOGETHER USING 4 X 80MM SCREWS, THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 4, 5 & 6).
5. PLACE SECOND DOOR PANEL INTO POSITION AND FIX TO THE SIDE PANELS USING 8 X 80MM SCREWS, (4 X EACH SIDE), THROUGH THE MARKED PRE DRILLED HOLES. (See Fig 7, 8 & 9).
6. PLACE COVER INTO POSITION BY THREADING THE PLASTIC TOGGLES THROUGH THE HOOKS IN EACH POST. (See Fig 10, 11 , 12 & 13).

Parts List:

- 16 X 80MM FIXING
SCREWS

Tools Required

- DRILL OR SCREWDRIVER.

ASSEMBLY INSTRUCTIONS – EY10809

Sail Shade Shelter



Fig 1.



Fig 2

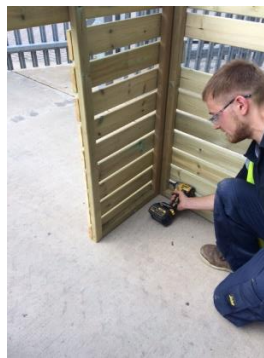


Fig 3

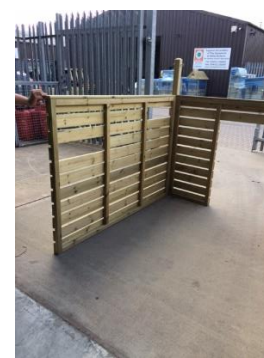


Fig 4



Fig 5



Fig 6

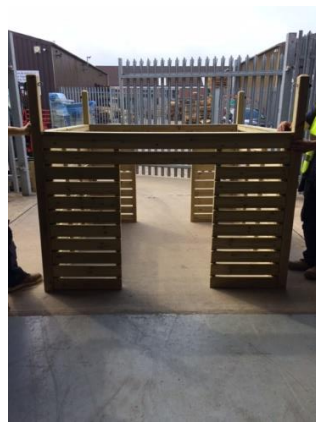


Fig 7



Fig 8

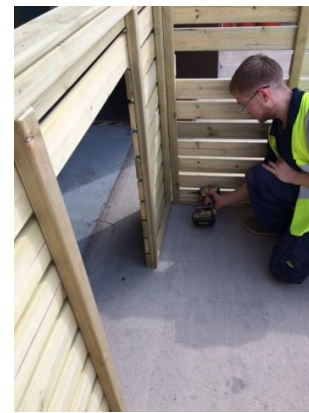


Fig 9



Fig 10

ASSEMBLY INSTRUCTIONS – EY10809
Sail Shade Shelter



Fig 11



Fig 12



Fig 13