

Assembly Instructions

¾ Climbing Prism

THIS PRODUCT WILL REQUIRE TWO PEOPLE TO ASSEMBLE

Fixing Kit:

- 4 x 5 x 80mm
- 8 x 5 x 70mm
- 10 x 4 x 40mm
- 1 x PZZ Drill Bit

Tools Required:

- Cordless Drill/Screwdriver


1. Place the floor in the selected area on flat level ground (Fig 1)
2. Place the two side panels on top of the floor to form a triangle structure.
3. Fix the side panels to the floor using 4 x 80mm screws (one screw per corner) (Fig 2)
4. Fix the top beam using 4 x 40mm screws as shown (Fig 3)
5. Fix the two braces using 6 x 40mm screws (three screws per brace) (Fig 4)
6. On the inside fix the two rails to the side panels using 8 x 70mm screws (four screws per rail) (Fig 5)
7. Finished product (Fig 6)




(Fig 1)




(Fig 2)

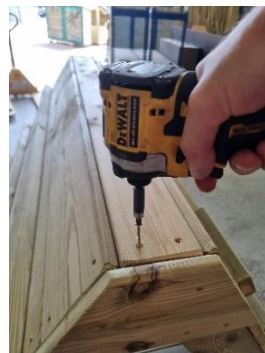


(Fig 3)

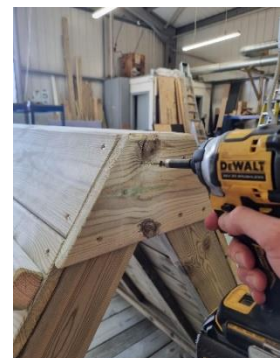

(Fig 3)

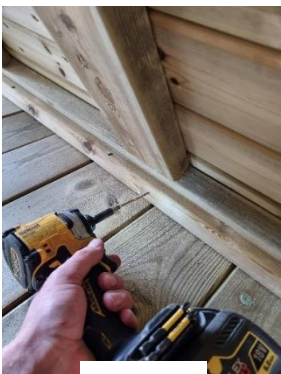

(Fig 4)

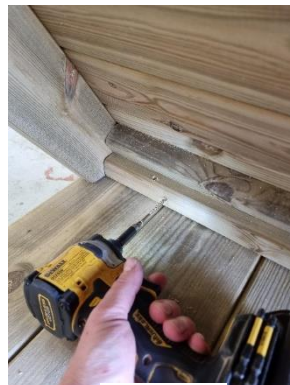

(Fig 5)



(Fig 6)